


The Drip Zones define the average outer most reach of the trees branches. This chart is for trees of varying size.

For additional information, please visit: www.rootwell.com

Approximate Rootwell placement distance from trunk, typical.

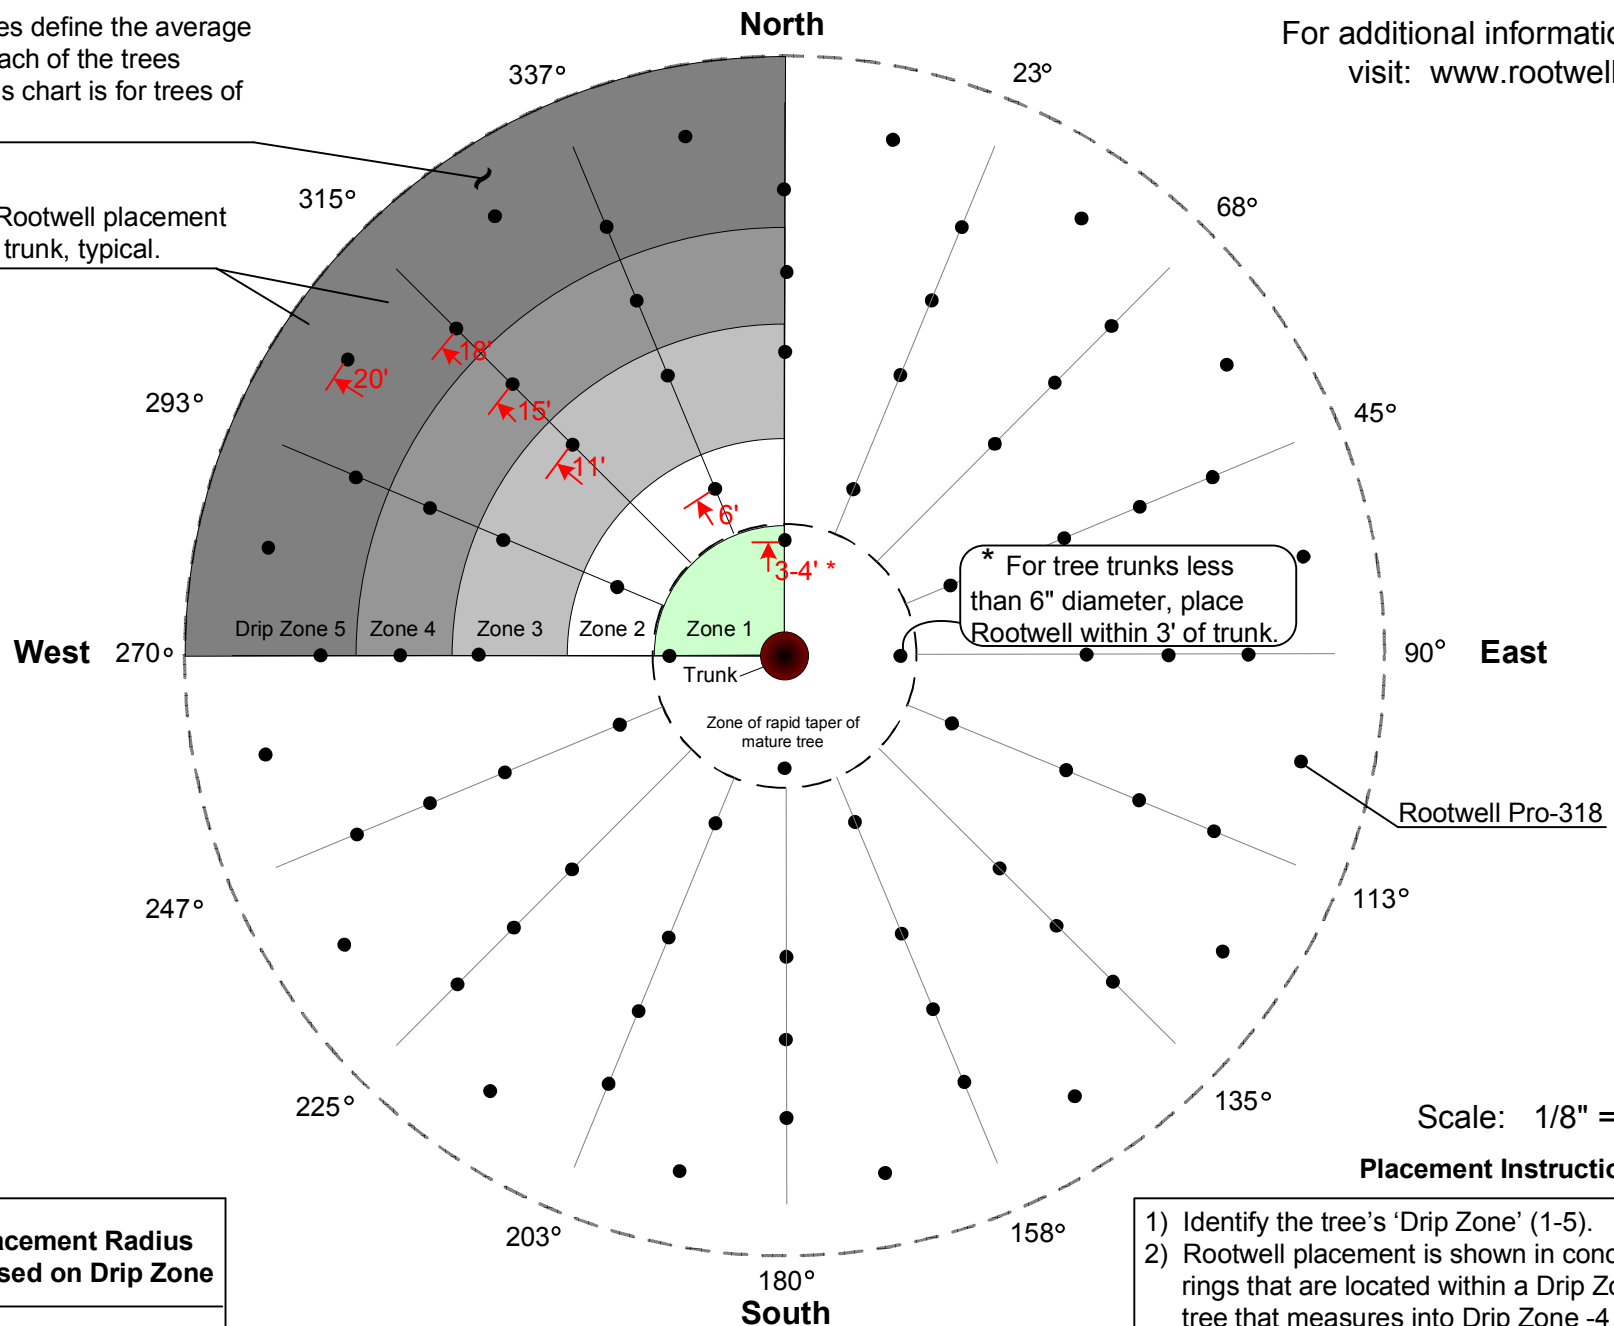

Rootwell Placement Radius from trunk based on Drip Zone

Drip Zone 1	2 - 4'
Drip Zone 2	4 - 8'
Drip Zone 3	8 - 12'
Drip Zone 4	12-16'
Drip Zone 5	16- 20'

Rootwell Pro-318 Placement Guide for Establish Trees

Scale: 1/8" = 1'
Placement Instructions

- 1) Identify the tree's 'Drip Zone' (1-5).
- 2) Rootwell placement is shown in concentric rings that are located within a Drip Zone. Example: A tree that measures into Drip Zone -4 will include Drip Zones 1, 2 & 3 as well.
- 3) Measurements are taken from the trunk and can vary due to obstructions, roots, etc.
- 4) The compass degrees are to be used as an aid.
- 5) Follow installation instructions.